


# INSTALLATION INSTRUCTIONS



## TACOMA FLATBED OPTIONAL FENDER KIT

300724-1-KIT

### KIT CONTENTS:

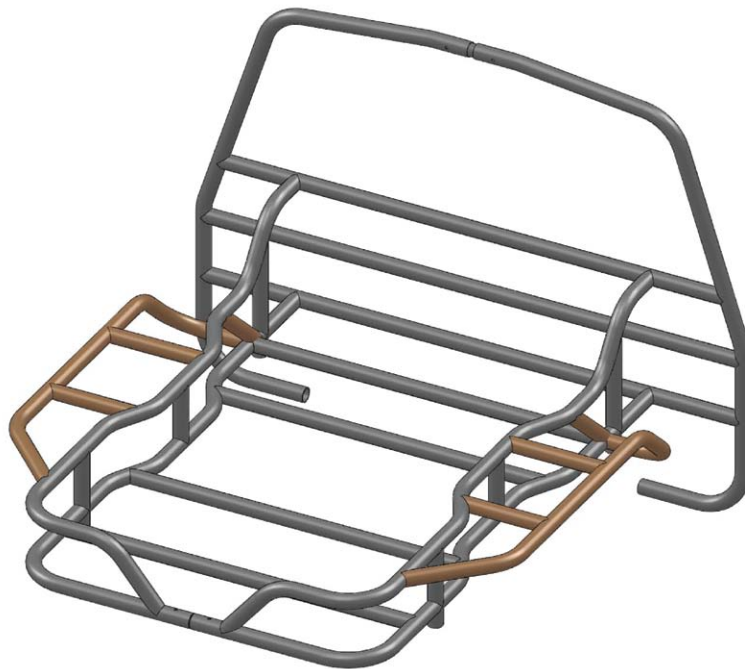



## RECOMMENDED TOOLS

Welder  
Grinder  
Level  
Square  
Ratchet Strap

## CAUTION

1. Read all instructions completely and carefully before you begin.
2. Check to make sure the kit is complete and that no parts are missing (refer to the Kit Contents List on the first page of these instructions). If anything is missing, please contact Trail-Gear at 559.252.4950.
3. Park vehicle on a clean, dry, flat, level surface and block the tires so the vehicle cannot roll in either direction.

# INSTALLATION INSTRUCTIONS



## STEP 1

Install fender tubes as shown using a level and square to ensure proper alignment.

**NOTE: THIS KIT IS NOT FOR NOVICE WELDERS, MINOR FABRICATION, AND WELDING SKILLS WILL BE NECESSARY**

**MINOR GRINDING TO IMPORVE FITMENT MAY BE REQUIRED**

ITEM NO.	PART NUMBER	QTY.
1	300722-01	1
2	300723	2
3	300722-02	1
4	300729	2
5	300803	2

