


Part List					Tool Required (Not Included)	
Item	Qty	Code	Description	Torque	Qty	Description
1 Bracket set						
1	1		Driver Side Main Bracket		1	9/16" Socket / Wrench
2	1		Passenger Side Main Bracket		1	18mm Socket / Wrench
3	1		Passenger Side Auxiliary Bracket		1	3/4" Socket / Wrench
4			1/2" Rod bolt	75 Lb. Ft	1	Ratchet extension
					1	Ratchet
2 Hardware kit						
1	1	KTE-52476	1/2 x 1 1/2" Hex bolt	75 Lb. Ft		
	5		1/2" Flat washer			
	5		1/2" Lock washer			
	5		1/2" Hex nut			
	4		3/8 x 1" Carriage Head bolt	30 Lb. Ft		
	4		3/8" Flat washer			
	4		3/8" Lock washer			
	4		3/8" Hex nut	30 Lb. Ft		

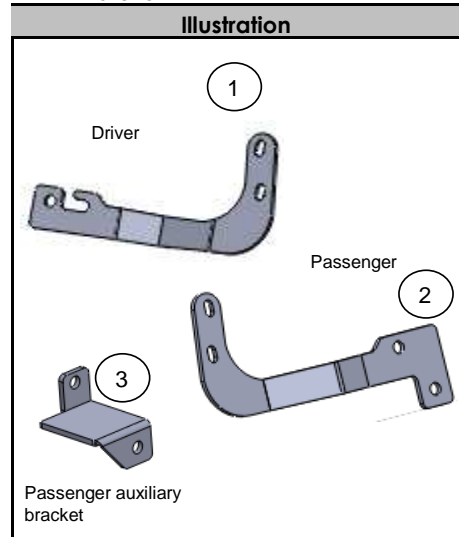

Instructions

1. Read the installation instructions completely and verify that all of the parts listed are accounted for. If you have defective, missing or damaged parts or need assistance, please contact Go Rhino Product for fast, friendly customer service at: **1-888-427-4466** or email: warranty@gorhino.com

Approximate installation time **30 min.**

NOTE: If your vehicle is not equipped with factory tow hooks, attach the main bracket and auxiliary bracket to the frame using the supplied 1/2" rod bolts, 1/2" flat washers, 1/2" lock washers and 1/2" hex nut.

2. Beginning with the driver side, remove the tow hook rear bolt, nut from the front bolt, and the foam trim panel from the tow hook opening. **(Photo 1 & 2)**

PHOTO 1


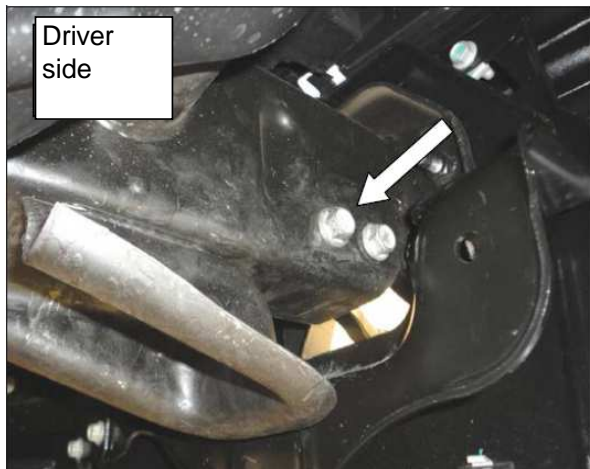


PHOTO 2

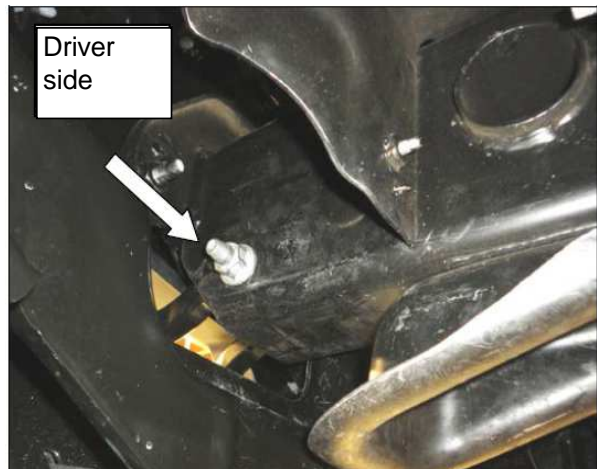


3. Shift the front tow hook bolt toward the center of the vehicle, then from the tow hook opening, slide the vehicle attachment end of the driver side main bracket under the frame, and rotate the bracket. (**Photo 3 y 4**)

PHOTO 3



PHOTO 4

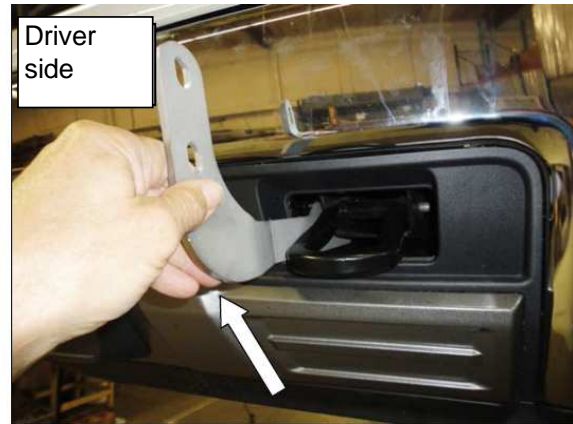

4. Hook the slot in the bracket over the shank of the front tow hook bolt, reinstall the front bolt nut and rear tow hook bolt to secure the bracket to the side of the frame, (**Photo 5 & 6**). Leave the nuts and bolts loose for final adjustment..

PHOTO 5



PHOTO 6



5. Passenger side, remove the tow hook rear bolt, nut from the front bolt, (**Photo 7 y 8**). And the foam trim panel from the tow hook opening.

PHOTO 7

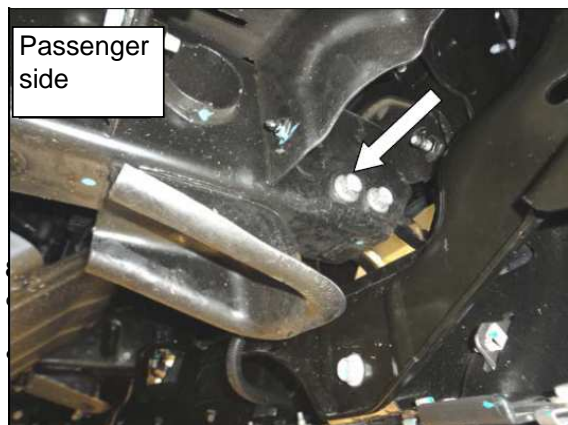


PHOTO 8



6. From the tow hook opening, slide the vehicle attachment end of the passenger side bracket under the frame, rotate the bracket and position the upper attachment hole in the bracket over the shank of the front tow hook bolt and reinstall the nut, (**Photo 9 y 10**). Leave the nut and bolts loose for final adjustment.

PHOTO 9


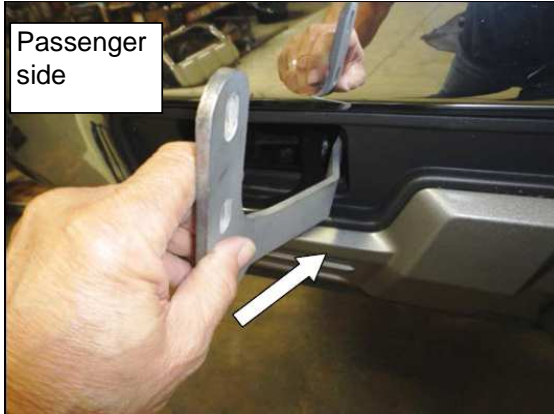


PHOTO 10

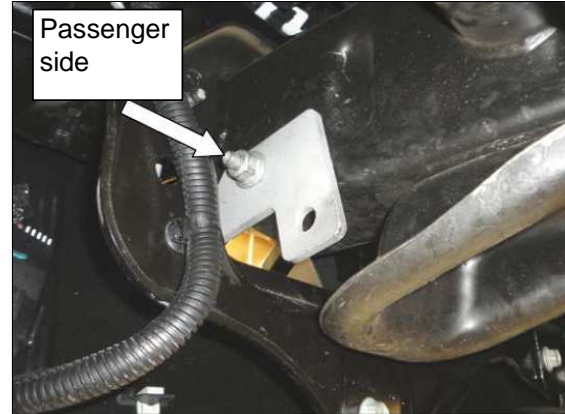


7. Attach the passenger side auxiliary bracket to the side of the frame using the tow hook rear bolt and the passenger side main bracket using (1) 1/2 x 1 1/2" hex bolt, (1) 1/2" flat washer, (1) 1/2" lock washer and (1) 1/2" hex nut, (**Photo 11 y 12**) Leave the factory and supplied nuts and bolts loose for final adjustment.

PHOTO 11



PHOTO 12

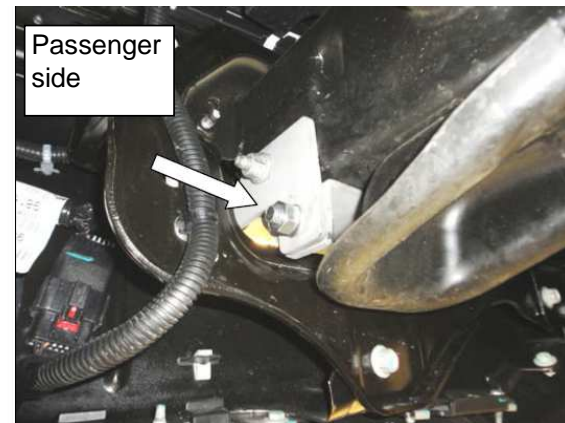

8. With assistance, position the Dakar Pro up to the main bracket and attach the mounting flanges to the outside of each bracket using (2) 3/8 x 1" carriage bolts, (2) 3/8" flat washers, (2) 3/8" lock washers and (2) 3/8" hex nuts, (**Photo 13 y 14**)

PHOTO 13



PHOTO 14



9. Align the Dakar Pro with the vehicle and tighten all factory and supplied nuts and bolts. Remember to check and retighten the nuts and bolts periodically.

