


## INSTALLATION INSTRUCTIONS

## APPLICATION: LICENSE PLATE RELOCATOR / ALL VEHICLES THAT USE 3 1/2" CONTOUR BULL BAR APP PART # 32-30055


ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	RELOCATOR BRACKET	RATCHET
2	2	M10 BUTTON HEAD CAP SCREW (STAINLESS)	TORQUE WRENCH
3	2	M10 INTERNAL TOOTHED LOCK WASHER (STAINLESS)	4MM - 6MM HEX KEY TOOLS (INCLUDED)
4	2	M10 FLAT WASHER (STAINLESS)	
5	2	M6 BUTTON HEAD CAP SCREW (STAINLESS)	
6	2	RUBBER BUMPERS (ADHESIVE BACKING)	

## ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING.

- 1. Remove contents from box, verify if all parts listed are present and undamaged. Carefully read and understand all instructions before attempting installation. (Note: It is usually easier to install relocator to Bull Bar before installing Bull Bar to vehicle.)
- 2. Place rubber bumpers on bracket face to keep bracket from contacting the Bull Bar. See Figure 1.
- 3. Loosely install license plate to bracket using supplied M6 hardware. Use either top or bottom threaded insert to ensure best fit and license plate visibility, see Figure 1.
- 4. Loosely install relocator bracket to Bull Bar with supplied M10 hardware, see Figure 2.
- 5. Align and adjust as necessary, then Torque: M6 hardware to 6 ft-lbs, M10 hardware to 30-35 ft-lbs.
- 6. Attach Bull Bar to vehicle according to the instructions supplied with the Bull Bar Assembly.

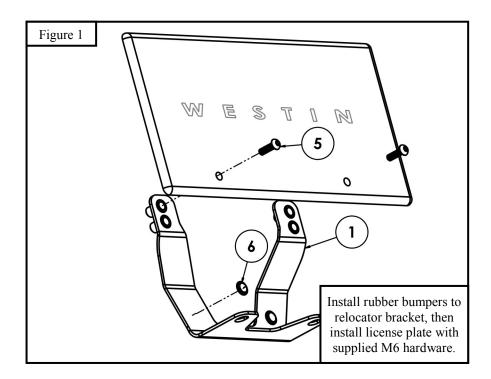



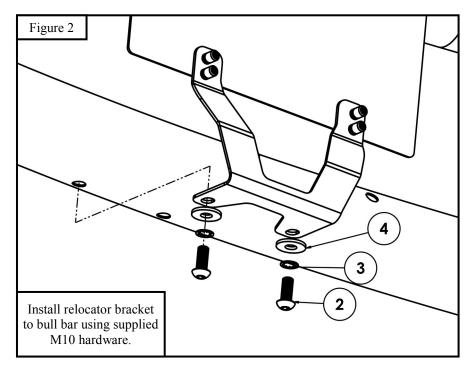



## **CARE INSTRUCTIONS**

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.



Westin Automotive Products, Inc. 320 Covina Blvd San Dimas, Ca. 91773