

Can-Am 2011-20 Commander/2013-19 Maverick Roof

Thank you for choosing Rough Country for all your UTV needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

KIT CONTENTS:

- (2) Roof Sections
- (1) 5' H Molding
- (2) Edge Assembly Tab
- (1) Center Assembly Part
- (8) 1/4" x 3/4" Bolts
- (8) 1/4" Acorn Nuts
- (16) 1/4" Flat Washers
- (4) 1/4" x 1" Bolts
- (8) 1/4" x 1" Fender Washers
- (4) 2" P-Clamp

TOOLS NEEDED:

- 1/4" Drill
- Drill Motor
- 7/16" Socket/Wrench
- Ratchet
- Marker
- Knife or Scissors

▲ NOTICE The mounting of this roof is not intended to hold for transporting on an open trailer or truck. It must be removed or secured with a secondary device for such transporting. We are not responsible for loss or damage due to transporting on and open trailer or vehicle.

Installation Instructions

1. Working from one side to the other slide the H molding on to one of the roof sections. (Leave some overhang of the molding on each side to be trimmed flush with the edge after the roof assembly is complete). **See Photo 1.**
2. Working from one side to the other slide the second roof half into the H molding. (Make sure to get them tight together). **See Photos 2A & 2B.**



Photo 1


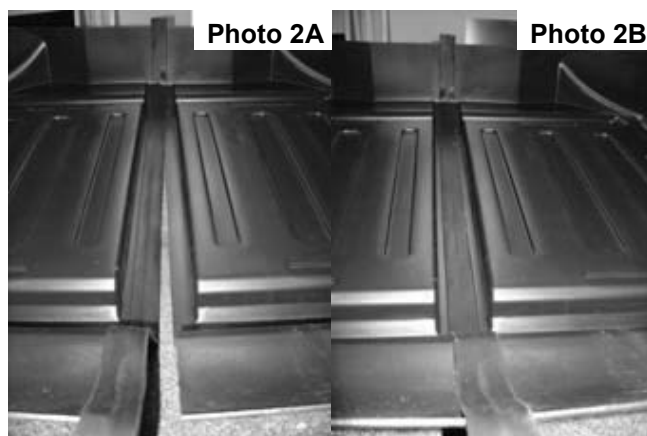



Photo 2A

Photo 2B

3. Place the assembly part into the roof and transfer the 1/4" holes through the roof with the hand drill one at a time putting in the 1/4"-20 x 3/4" bolts with a 1" fender washer on the top of the roof and 1/4" washer on the bottom inside the assembly part securing them with the acorn nuts. **See Photos 3 & 4.**

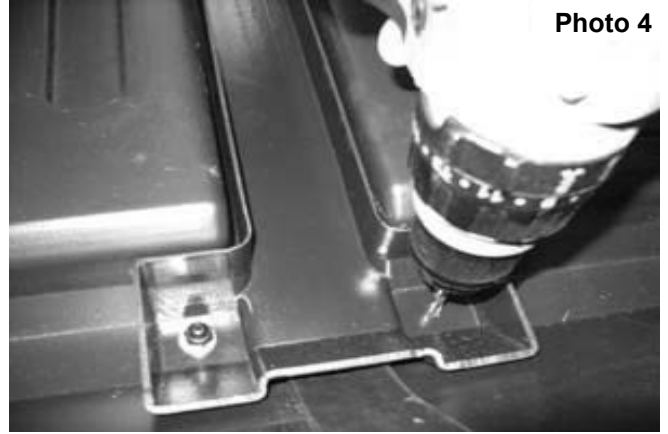

4. Place an assembly tab at the front and rear to the inside of the roof. Transfer the 1/4" hole through the roof with the hand drill one at a time putting in the 1/4"-20 x 3/4" bolts with a 1/4" washer on the top and bottom securing them with the acorn nuts. **See Photos 5, 6, 7, & 8.**

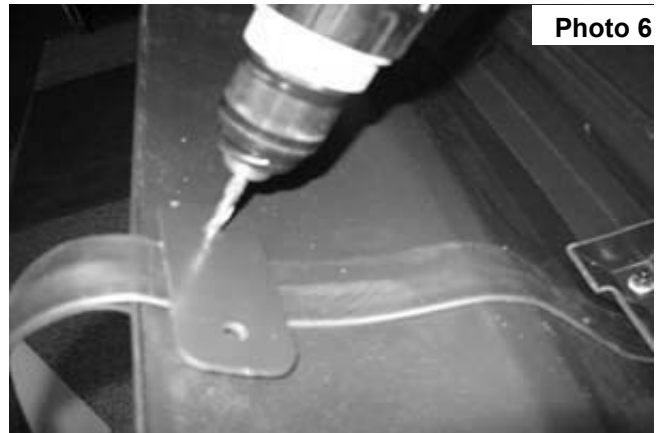

- Using a knife or scissors cut the H molding off flush with the roof edge. **See Photo 9.**
- Place the assembled roof on top of your Commander UTV. **See Photo 10.**

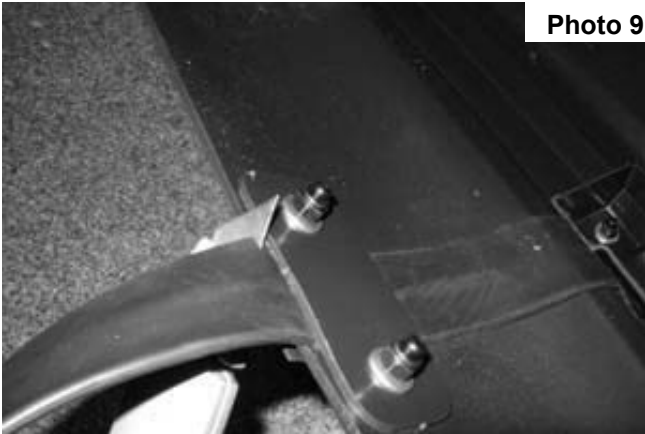


Photo 9



Photo 10

- Place (2) P-Clamps on the ROPS in the front corners of the roof where you can fit a bolt through with the 1" fender washer on the top of the roof. Mark these locations. **See Photo 11.**
- Place (2) P-Clamps on the rear portions of the ROPS where you can fit a bolt through with the 1" fender washer on the top of the roof. Mark these locations.
- Drill the marked locations with a 1/4" drill bit.
- Insert the 1/4"-28 x 1" inch bolts with a 1" fender washer on them down through the top of the roof and through the P-Clamp. Securing with a 1/4"-28 nylock nut. **See Photos 12 & 13.**



Photo 11

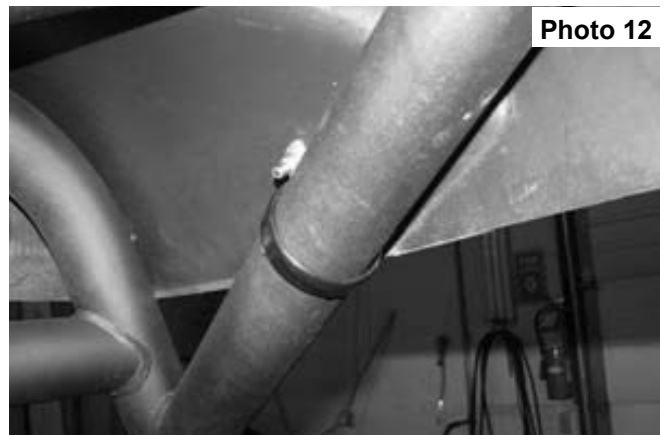


Photo 12



Photo 13



Thank you for choosing Rough Country for all your UTV needs.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

