



# INSTALLATION INSTRUCTIONS

## Part Number E-2653 & E-2657

This filter fits: See current catalog for applications

**\*FREE K&N DECAL** To register your warranty, please see us online at [knfilters.com/register](http://knfilters.com/register). **FREE K&N DECAL\***

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modifications will be required. However the following procedures **MUST** be followed to ensure the proper fit and seal of the K&N *Filtercharger*<sup>®</sup>.

1. Remove the screws that fasten the airbox lid to the airbox base.
2. Remove the airbox lid from the vehicle.
3. Remove the dirty air filter.
4. Wipe out any dirt or dust that may be inside the air filter housing.
5. Install the K&N **FILTERCHARGER** into the airbox base by first applying gentle pressure to the base side first. (See fig. 1)
6. Orient filter so that post on end of filter drops into notch in air box when filter is seated. (See fig. 2.)
7. Use index finger to press clamp against flange and slide filter and clamp against air box base until fully seated. (See fig. 3)
8. Orient clamp as shown to insure that air box lid closes properly. Tighten clamp. (See fig. 4)
9. Re-install the airbox lid and re-fasten the screws.

**THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.**



Fig. 1



Fig. 2



Fig. 3

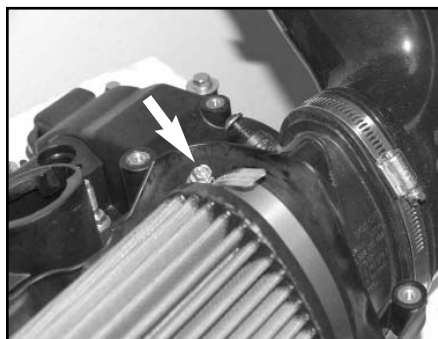


Fig. 4