

Installation Instructions

2018+ Jeep Wrangler JL



I-WBJL

Part Number

990037 & 990040

For proper installation and best possible fit, please read all instructions BEFORE you begin.
For technical assistance or to obtain missing parts, please call Customer Relations at 1-800-328-2409.

Installation Steps

NOTE: Actual application may vary slightly from illustrations.


Hang the Windbreaker over the rear roll bar and strap down from the inside of the roll bar (not outside). Place the center straps around the roll bar and through the slit in the Windbreaker. Wrap the strap through the buckle and tighten. Then wrap the side straps around the side roll bars and tighten.

1



Hook both straps on the bottom of the Windbreaker to the floor hooks and tighten.

2

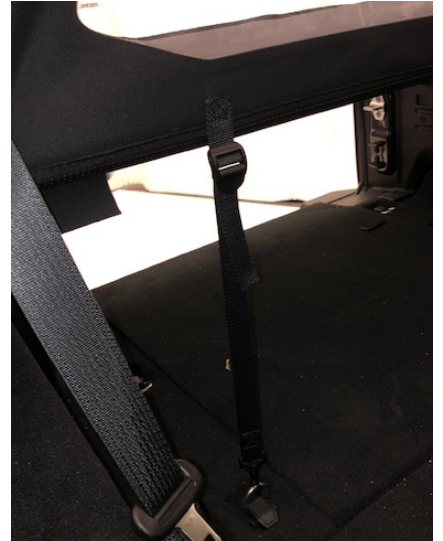

Hook the side straps underneath the tub lip and tighten.

3



If you have a Rampage Tonneau Cover, the Windbreaker can be zipped to it.

Adjust and tighten the Windbreaker so it is centered and snug.



4

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.
- Do not use cleaning solvents of any kind.

Congratulations!

Your new WindBreaker is installed! Now go enjoy the ride.

Thank you for purchasing one of the many quality Rampage® products offered by Lund International. We take the ultimate pride in our products and hope you receive years of satisfaction from your investment. We have made every effort to guarantee that your product is of the highest quality for fit, durability, finish, and ease of installation. 800-328-2409 • Visit us at Rampageproducts.com



Rampage Products is a trademark of Lund International

Copyright © 2019 of Lund International

