


I-SHEET NUMBER: INST-00107 PART NUMBER: **GFF19-CCTX**

PRODUCT: Growler Running Board

APPLICATION: 2019 + FORD RANGER CREW CAB


HARDWARE DESCRIPTION		QTY.
HWKT- 04268X		QII.
FHLB	M10x25mm HEX FLANGED BOLT	12
04240X	MIOX25IIIII HEX FLANGED BOLT	12
FLHB-	3/8"-16 X 1" GRADE 5 HEX	12
00688	SERRATED FLANGE BOLT	12

PARTS INCLUDED	
Running Board	
Rocker Panel mounting Brackets	
Threaded clamp plates	

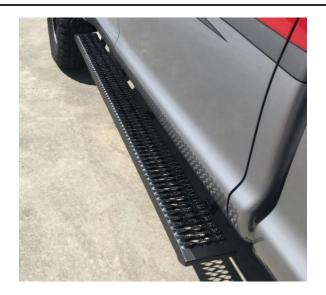



DO NOT USE IMPACT TOOLS

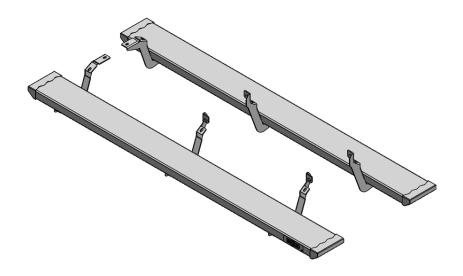


STEP 1: Remove any factory running boards or hardware and discard.

STEP 2: Clean/tap the three factory threaded mounting locations.



STEP 3: Starting with the driver's side, install the (x3) rocker panel mounting brackets to the factory attachment points using the supplied M10X25mm Hex Cap Bolts and leave loose at this time.

STEP 4: Set running board along the top of the three brackets and center along the cab front/back.

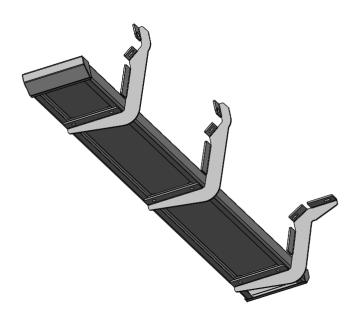



I-SHEET NUMBER: INST-00107 PART NUMBER: **GFF19-CCTX**

PRODUCT: Growler Running Board


APPLICATION: 2019 + FORD RANGER CREW CAB


Step 5: Insert the supplied threaded brackets (x3) inside the running board lip over the top of each bracket.

Step 6: With the supplied 3/8" x 1" hex bolts, secure each mounting location and leave loose.

Step 7: After finial adjustment, tighten all running board threaded mounts.

Step 8: Next, adjust rocker panel brackets so the running board is level with body of the vehicle and tighten all factory-mounting locations.

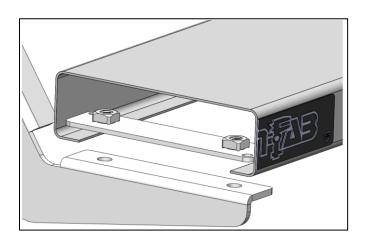

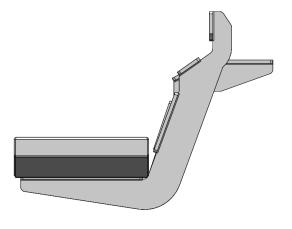

Step 9: Repeat with passenger side.