

Installation Instructions

IS-HC-743

Part Numbers

74333, 74334 &

74335

76-83 Jeep CJ5

76-86 Jeep CJ7

87-95 Wrangler YJ

97-06 Jeep Wrangler TJ

07-18 Jeep Wrangler JK & JK

Unlimited 4 Dr



Cast Stainless Billet Hood Catch

Parts List:

- 1- Set Hood Catches
- 4- Rubber bump stops on 74335 only
- 1- Alcohol pad

Tools Required:

- Ratchet
- Extension
- 10mm socket
- 11mm socket
- 13mm socket


Installation:

- 1) Remove factory Hood catches
 - a) Open hood and prop
 - b) Remove two 10mm nuts from top hook and remove
 - c) Remove one 13mm nut from lower Catch Strap on fender
- 2) Install Cast Billet Catches. See fig. 1
 - a) Install in reverse of step one.
 - b) Insert stud plate through two holes in Top hook, place on hood and tighten with 11mm nuts.
 - c) Install Lower Catch Strap on fender so pins align and tighten with 13mm nut.
- 3) 74335 requires: 4 Round Rubber Bump stops positioned on flat surface of hood next to catch. Clean flat surface of fender with Alcohol pad, remove adhesive strip and place on fender. See fig. 2

Fig. 1



Fig. 2

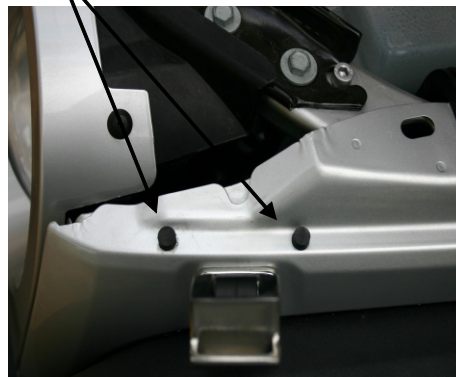

Rampage Products Buford, GA

www.rampageproducts.com

800-328-2409