

# **CRAWL**TEK R E V O L U T I O N


491 W. GARFIELD AVE., COLDWATER, MI 49036 • 517.278.1039  
CRAWLTEKREVOLUTION.COM • E-MAIL: SALES-CRAWLTEK@RIDEFOX.COM

## **INSTALLATION INSTRUCTIONS**

### **BODY CLADDING - STEEL**

#### **JK40401 - 4 DOOR**

**FOR USE WITH ALL  
JK AND JKU MODELS FROM 2007-2018**

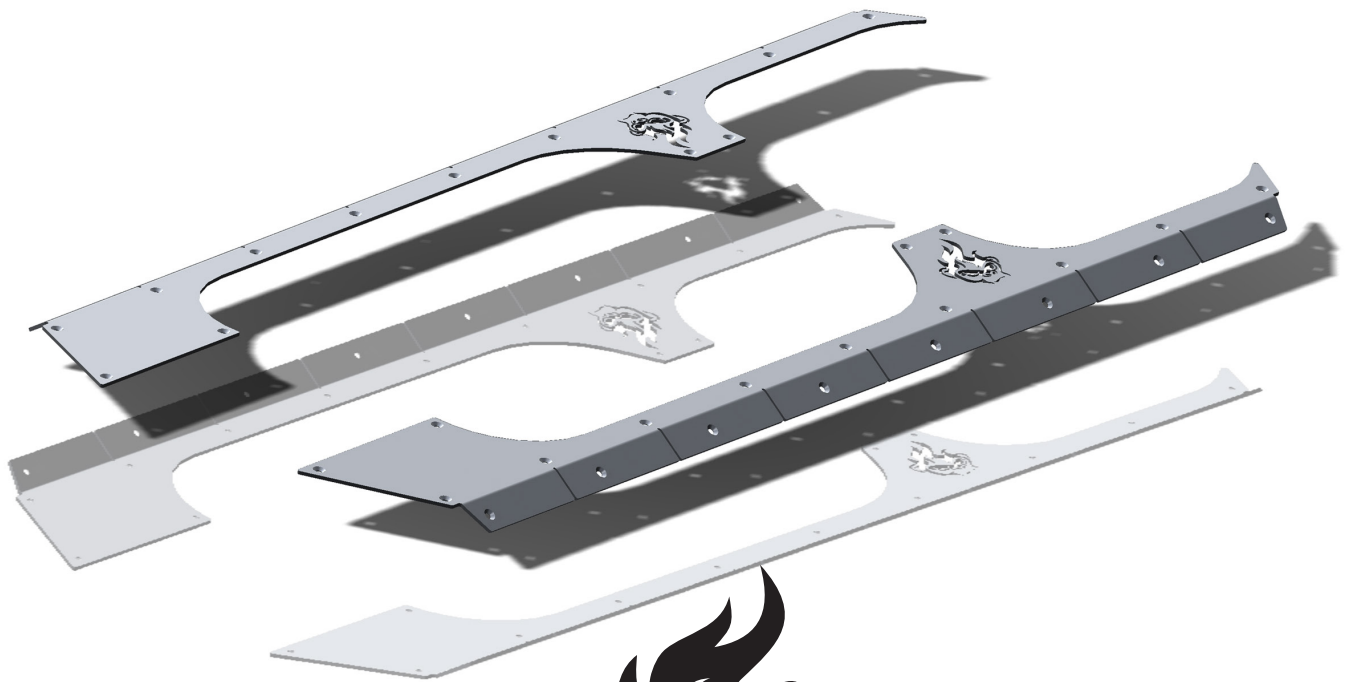

CrawlTek YouTube

**PLEASE READ THROUGH INSTRUCTIONS BEFORE INSTALLING**

2022-11-14

## WHAT'S IN THE BOX?

PLEASE VERIFY KIT CONTENTS BEFORE BEGINNING INSTALLATION

PART #	Qty	DESCRIPTION
06067	1	BODY CLADDING - DRIVER
06068	1	BODY CLADDING - PASSENGER
CWLU30010	1	DECAL: CRAWLTEK GEARSHIFT 3.5" X 3.5"
CWLU30020	1	DECAL: CRAWLTEK EYES 6" X 2"
CWLU30030	1	DECAL: CRAWLTEK JAX 3.75" X 2.8"
	38	5/16"-18 X 1" BLACK STAINLESS STEEL FLAT SOCKET CAP SCREW
	4	5/16"-18 X 1/2" BLACK STAINLESS STEEL FLAT SOCKET CAP SCREW
	2	5/16"-18 ZINC SERRATED HEX FLANGE NUT
	40	5/16"-18 .027-.150 LARGE FLANGE RIBBED NUTSERT STEEL

## TOOLS REQUIRED

SAFETY GLASSES

10MM WRENCH OR SOCKET

1/2" SOCKET OR WRENCH

3/16" ALLEN HEAD SOCKET

17/32" DRILL BIT

1/8" DRILL BIT

STEP BIT

HOLE PUNCH

PAINT MARKER

## FACTORY ROCK RAIL REMOVAL (IF EQUIPPED)

### STEP 1:

REMOVE (3) BOLTS UNDER EACH SIDE OF THE VEHICLE.

### STEP 2:

REMOVE (6) NUTS ALONG EACH PINCH SEAM.

### STEP 3:

REMOVE OEM ROCK RAILS.



## INSTALLATION OF THE BODY CLADDING

### STEP 4:

USING PAINTERS TAPE ALIGN THE BODY CLADDING UP ON THE VEHICLE ENSURING THE SAME GAP AROUND THE DOOR OPENS (APPROXIMATELY 3/16")

### STEP 5:

MARK CENTERS OF 2 HOLES AT THE FRONT AND BACK OF THE BODY CLADDING, AND DRILL PILOT HOLES.

### STEP 6:

REMOVE BODY CLADDING, DRILL TOP FRONT HOLE TO 3/8", DRILL REAR HOLE TO 17/32".

### STEP 7:

INSTALL 5/16" RIVET NUT IN REAR HOLE WITH A BEAD OF RTV AROUND THE RIVET NUT TO REDUCE THE CHANCE OF RUST.

### STEP 8:

INSTALL BODY CLADDING WITH 2 HOLES PREVIOUSLY PREPARED, USE PAINTERS TAPE WHERE NEEDED TO KEEP BODY CLADDING TIGHT TO BODY.

### STEP 9:

MARK CENTERS OF REMAINING HOLES, AND REMOVE BODY CLADDING.

### STEP 10:

INSTALL 5/16" RIVET NUT ON REMAINING HOLES, DO NOT FORGET TO USE RTV WHEN INSTALLING.

### STEP 11:

REPEAT ON OPPOSITE SIDE.

### STEP 12:

REINSTALL OEM ROCK RAILS IF REMOVED.





## YOU'RE NOT DONE YET!

*Thank you for your new CrawlTek Revolution purchase! Follow us on facebook for up to date coverage of new product releases. We love feedback, if you have any questions about the installation or parts were missing please contact us at [sales-crawltek@ridefox.com](mailto:sales-crawltek@ridefox.com) or call us at 517.278.1039.*

*Be sure to show off your jeep to the rest of the CrawlTek Revolution online. Find us on facebook and instagram to keep up on new products, upcoming events and more action. Tag us @crawltek for a chance to get featured*

